


## Operating Instructions



### Correct Use



**SR7C is a universally applicable safety relay with seven safe relay contacts that can be used to quickly and safely stop the moving parts of a machine or system in the event of danger.**

**The SR7C can be used for single or dual-channel emergency stop switching and safety guard monitoring on machines and systems in accordance with EN ISO 13849-1, EN IEC 62061 and in systems in accordance with IEC 61508.**

- 7 safe, redundant relay contacts
- 4 aux relay contacts and 2 aux semiconductor outputs
- Connection of:
  - Emergency stop buttons
  - Safety switches
  - Non-contact safety switches
  - OSSD-Outputs
- Single or dual-channel operation possible
- Feedback loop for monitoring downstream contactors or expansion modules
- Cyclical monitoring of the output contacts
- Indication of the switching state via LED

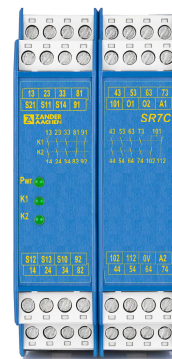

- 2 start behavior possible:
  - Monitored manual start
  - Automatic start
- Up to PL e, SIL 3, category 4
- STOP-category: 0

### Function

The emergency stop safety switching device SR7C is designed for safe isolation of safety circuits according to EN 60204-1 and can be used up to safety category 4, PL e / SIL 3 according to EN ISO 13849-1 / IEC 61508.

The internal logical system closes the safety contacts when the start button is pressed.

If the safety switch is opened, the positively driven safety contacts are opened and safely switch the machine off. It is ensured that a single fault does not lead to a loss of the safety function and that every fault is detected by cyclical self-monitoring no later than when the system is switched off and switched on again.

The operating status of the device is indicated by the auxiliary transistor outputs O1 and O2.

O1: Ready. PWR is connected.

O2: Both relay channel K1, K2 are switched on.

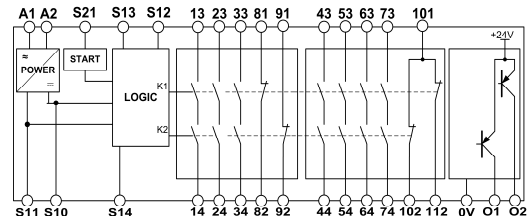


Fig. 1 Block diagram SR7C

### Installation

As per EN 60204-1, the device is intended for installation in control cabinets with a minimum degree of protection of IP54. The following should be noted:

- Mounting on 35 mm rail according to EN 60715 TH35
- Ensure sufficient heat dissipation in the control cabinet
- Minimum distance to adjacent devices depending on max. cumulative current (see Techn. Data)
- **Note:** Spacer from ZANDER AACHEN (Art. No. 472596) for defined distances - See section Accessories.

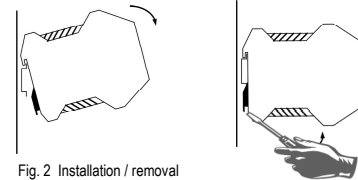


Fig. 2 Installation / removal


### Safety Precautions



- Installation and commissioning of the device must be performed **only by authorized personnel**.
- Observe the country-specific regulations when installing the device.
- The electrical connection of the device is only allowed to be made with the device isolated.
- The wiring of the device must comply with the instructions in this user information, otherwise there is a risk that the safety function will be lost.
- It is not allowed to open the device, tamper with the device or bypass the safety devices.
- All relevant safety regulations and standards are to be observed.
- The overall concept of the control system in which the device is incorporated must be validated by the user.
- Failure to observe the safety regulations can result in death, serious injury and serious damage.
- Note down the version of the product (see label "Ver: x") and check it prior to every commissioning of a new device. If the version has changed, the overall concept of the control system in which the device is incorporated must be validated again by the user.
- The year of manufacture can be found on the type label on the device. It is located at the end of the line of the voltage specification, below the ID number.

### Electrical Connection

- Consider the information in the section "Techn. data"
- A safe transformer according to IEC 61558-2-6 or a power supply unit with electrical isolation from the mains must be connected
- External fusing of the safety contacts must be provided
- If the device does not function after commissioning, it must be returned to the manufacturer unopened. Opening the device will void the warranty
- Use adequate protective circuit for inductive loads (e.g. free-wheeling diode)

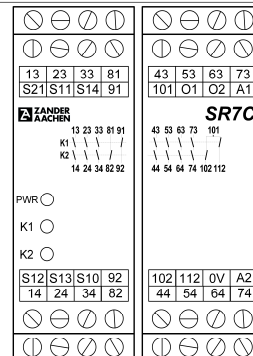

A1:	Power Supply
A2:	Power Supply
S11:	DC 24V control voltage
S10:	Control line
S12:	Control line
S13:	Control line
S14:	Control line
S21:	Start, Control line
O1;O2:	Aux transistor outputs
0V:	Reference common O1, O2
81-82:	Auxiliary Contact
91-92:	Auxiliary Contact
101-102:	Auxiliary Contact
101-112:	Auxiliary Contact
13-14 - 73-74:	Safety contacts 1-7


Fig. 3 Connections

## Operating Instructions


### Applications

Depending on the application or the result of the risk assessment according to EN ISO 13849-1, the device must be wired as shown in Fig. 4 to Fig. 15.


### Emergency Stop Circuit

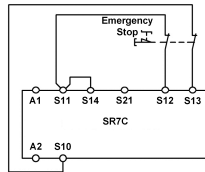


**Fig. 4:**  
Two-channel emergency stop circuit with short circuit and earth fault monitoring.  
(category 4, up to PL e / SIL 3)

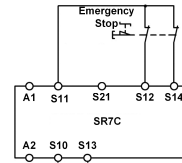


**Fig. 5:**  
Two-channel emergency stop circuit with earth fault monitoring.  
(category 3, up to PL d / SIL 2)

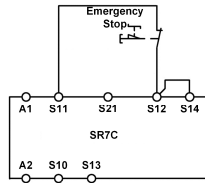


**Fig. 6:**  
Single-channel emergency stop circuit with earth fault monitoring.  
(category 1, up to PL c / SIL 1)

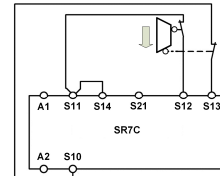

**Fig. 7:**  
Two-channel sliding guard monitoring with short circuit and earth fault monitoring.  
(category 4, up to PL e / SIL 3)

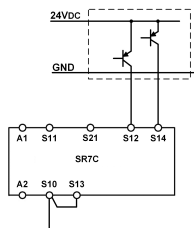

**Fig. 8:**  
Two-channel emergency stop with pnp-outputs/OSSD-outputs with short circuit monitoring.  
(category 4, up to PL e / SIL 3)

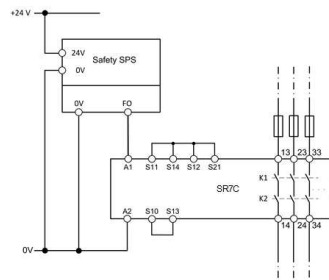


**Fig. 9:**  
Connecting to a safety PLC  
(category 4, up to PL e / SIL 3)  
**Prerequisite:**  
Fault exclusion for cross-circuit (e.g. according to EN ISO 13849-2; Table D4 - wiring in protected wiring space) and PLC also meets requirements for category 4, PL e / SIL3.




### Notice:

- In order to activate earth fault monitoring, the earth connection of the power supply unit must be on the secondary side
- It must be ensured that any switch-on pulses (light test) sent by the signal generator do not lead to a short activation of the safety relay and should therefore basically be deactivated
- For the applications according Fig. 8 and 9, make sure that the reference potential of the signal generator and the SR7C is the same

### Starting Behavior




**Fig. 10:**  
Monitored manual start.  
It is monitored that the start button was opened before the emergency stop button closes.  
(Prerequisite: operating voltage must not be interrupted.)




**Fig. 11:**  
Automatic start.  
Max permitted delay during closing of the safety switches on S12 and S13:  
S12 before S13: 300 ms  
S13 before S12: any

**Warning:**  
Safety contacts switch immediately when the power supply is connected.

### Feedback Loop

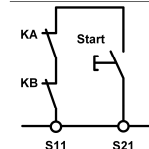


**Fig. 12:**  
Feedback loop for monitored manual start.  
The feedback loop monitors contactors or the expansion modules.

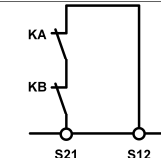


**Fig. 13:**  
Feedback loop for automatic start.  
The feedback loop monitors contactors or the expansion modules.

### Power supply and Safety contacts

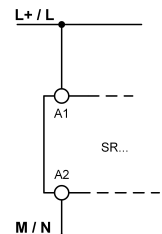

**Fig. 14:**  
Power supply A1 and A2.  
(Power supply according to techn. Data)

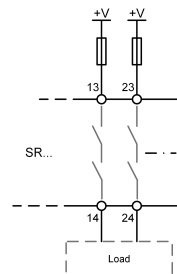

**Fig. 15:**  
Connecting load to safety contacts.  
(Figure shows example. Voltage „+V“ according to techn. Data)

### Commissioning Procedure



**Note:** The items listed under "Electrical connection" must be observed during commissioning.

#### 1. Wiring emergency stop circuit:

Wire the emergency stop circuit according to the required Performance Level determined (see Fig. 4 to Fig. 9).

#### 2. Wiring start circuit:

Wire the start circuit according to Fig. 10 or Fig. 11 to set the starting behavior.

#### Warning:

If "Automatic start" is set, bear in mind that the safety contacts will switch immediately after the power supply is connected. If "Monitored manual start" is set, the start button must be opened after wiring.

#### 3. Wiring feedback loop:

If your application provides for external contactors or expansion modules, connect them to the device according to Fig. 12 or Fig. 13.

#### 4. Wiring power supply:

Connect the power supply to terminals A1 and A2 (Fig. 14).

**Warning:** Wiring only in de-energized state.

## Operating Instructions

### 5. Starting the device:

Switch on the operating voltage.

#### Warning:

If the "Automatic start" starting behavior is set, the safety contacts will close immediately.

If the "Monitored manual start" starting behavior is set, close the start button to close the safety contacts.

LEDs **K1** and **K2** are lit.

### 6. Triggering safety function:

Open the emergency stop circuit by actuating the connected safety switch. The safety contacts open immediately.

### 7. Reactivation:

Close the emergency stop circuit. If "Automatic start" is selected, the safety contacts will close immediately.

If the "Monitored manual start" starting behavior is set, close the start button to close the safety contacts.

### Check and Maintenance

No maintenance is required for the device itself. But the following checks are regularly required to ensure proper and continuous functioning:

- Check the switch function
- Check for signs of manipulation and safety function bypassing
- Check if the device is mounted and connected securely
- Check for soiling

Check if the safety device is working properly, in particular:

- Every time after initial commissioning
- Every time after replacing a component
- After every fault in the safety circuit

Irrespective of this, the safe function of the protective device should be checked at suitable intervals, e.g. as part of the system's maintenance program. Maintenance work on the device itself is not required.

### What to Do in Case of a Fault?

#### Device does not switch on:

- Check the wiring by comparing it to the wiring diagrams.
- Check the safety switch used for correct function and adjustment.
- Check whether the emergency stop circuit is closed.
- Check whether the start button (with manual start) is closed.
- Check the operating voltage at A1 and A2.
- Is the feedback loop closed?

#### Device cannot be switched on again after an emergency stop:

- Check whether the emergency stop circuit was closed again.
- Was the start button opened before closing of the emergency stop circuit (with manual start)?
- Is the feedback loop closed?

If the fault still exists, perform the steps listed under "Commissioning Procedure".

If these steps do not remedy the fault either, return the device to the manufacturer for examination.

**Opening the device is impermissible and will void the warranty.**

### Techn. Data

Corresponds to the standards	EN 60204-1; EN ISO 13849-1; EN IEC 62061; IEC 61508 Parts 1-2 and 4-7
Operating voltage	AC/DC 24 V
Rated Supply Frequency	AC: 50-60 Hz
Permissible deviation	+ / - 10 %
Power consumption	<b>DC 24 V</b> <b>AC 24 V</b> approx. 4.5 W    approx. 8.5 VA
Control voltage at S11	DC 24 V
Control current S11..S14	approx. 250 mA
Safety contacts	7 NO contacts
Auxiliary contacts	4 NC contacts
Auxiliary transistor outputs (O1, O2)	DC 24 V / 30 mA, over current protected
Max. switching voltage	AC 250 V
Safety contact breaking capacity (13-14, 23-24, 33-34, 43-44, 53-54, 63-64, 73-74) (6 switching cycles/ min)	AC: 250 V, 2000 VA, 8 A for ohmic load 250 V, 3 A for AC-15 DC: 40 V, 320 W, 8 A for ohmic load 24 V, 3 A for DC-13 Max. total current through all 7 contact up to Ta=40 °C: 35 A    10 mm spacing between the devices 20 A    no spacing between the devices
Auxiliary contacts braking capacity (81-82, 91-92, 101-102, 101-112)	AC: 250 V, 2000 VA, 8 A for ohmic load DC: 40 V, 320 W, 8 A for ohmic load
Minimum contact load	5 V, 10 mA
Min. Contact fuses	10 A gG
Max. line cross section	0.14 - 2.5 mm <sup>2</sup>
Tightening moment (Min. / Max.)	0.5 Nm / 0.6 Nm
Typ. switch-on delay / switch-off delay for NO contacts requested via safety circuit	< 30 ms / < 20 ms
Max. length of control line	2x 1000 m at 1.5 mm <sup>2</sup> , 2x 500 m at 0.75 mm <sup>2</sup>
Contact material	AgSnO <sub>2</sub>
Contact service life	mech. approx. 1 x 10 <sup>7</sup>
Test voltage	2.5 kV (control voltage / contacts)
Rated impulse withstand voltage, leakage path/air gap	4 kV (EN 60664-1)
Rated insulation voltage	250 V
Degree of protection	IP20
Temperature range	-15 °C bis +40 °C
Max. altitude	≤ 2000 m (above sea level)
Degree of contamination	2 (EN 60664-1)
Overvoltage category	3 (EN 60664-1)
Weight	approx. 350 g
Mounting	DIN rail according to EN 60715 TH35

## Operating Instructions

### Disclaimer and warranty

If the above mentioned conditions for appropriate use are not complied with or if the safety instructions are not followed or if any maintenance operations are not carried out as required, this shall lead to an exclusion of liability and loss of warranty.

#### ATTENTION!

We would like to point out that it is the full responsibility of the operator to ensure a plant availability. Using the SR7C, a safety emergency stop relay according to

- EN ISO 13849-1
- EN IEC 62061
- IEC 61508


is used, which will be brought into the safe state when the safety function is requested.

This means that the connected load is switched off as soon as a request from connected sensor elements or diagnostic measures detects a dangerous state, e.g. caused by a component fault.


Since process-related applications in particular have high demands on availability, limited availability can also have significant consequences. It is therefore recommended to stock a second unit to avoid long downtimes in such a case. These are recommendations of the manufacturer, the evaluation of the importance of the plant availability is the sole responsibility of the operator.

### Dimension Drawing

#### Fixed Terminals

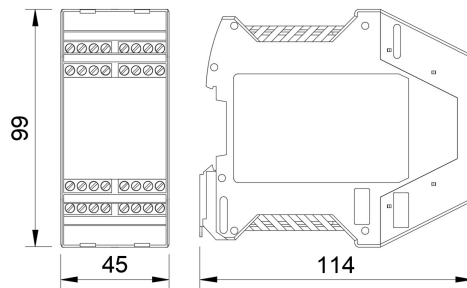

#### Plug-In Terminals

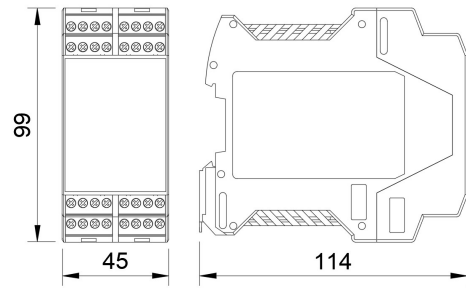

### Variants

Order No. 472242	SR7C, 24 V AC/DC (50-60 Hz),	fixed screw terminals
Order No. 474242	SR7C, 24 V AC/DC (50-60 Hz),	incl. plug-in screw terminals
Order No. 475242	SR7C, 24 V AC/DC (50-60 Hz),	incl. push-in twin spring connector

### Accessories

Order No. 472592	EKLS4,	set of plug-in screw terminals
Order No. 472595	EKLZ4,	set of push-in twin spring connector
Order No. 472596	Spacer Electric Cabinet	rail spacer 5mm, PU = 12 pcs

### Safety Characteristics

#### Safety characteristics according to EN ISO 13849-1

Load - DC-13	≤ 0.1 A	≤ 1 A	≤ 2 A
Max. duration of use [Years]	20	20	20
Category	4	4	4
PL	e	e	e
PFHd [1/h]	2.47E-08	2.47E-08	2.47E-08
nop [Cycles / year]	≤ 500,000	≤ 350,000	≤ 100,00

#### Safety characteristics according to IEC 61508 - High Demand

Conditions: Days of operation/year: 365; Hours/Day: 24; Switching-Cycle/Hour: 1; Maximum load AC-15 / DC-13

Max. duration of use [Years]	20
Proof-Test-Intervall [Years]	20
PFH [1/h]	1.99E-10
SIL	3

#### Safety characteristics for alternate 1oo1 structure for process industry - High Demand

Conditions: Days of operation/year: 365; Hours/Day: 24; Switching-Cycle/Hour: 1; Maximum load AC-15 / DC-13

Device type	A
HFT	0
SIL	3
SFF [%]	99.89
λ <sub>SD</sub> [FIT]	0
λ <sub>SU</sub> [FIT]	159.62
λ <sub>DD</sub> [FIT]	19.9
λ <sub>DU</sub> [FIT]	0.20
PFH [1/h]	1.99E-10

#### Safety characteristics according to IEC 61508 - Low Demand

Conditions: Maximum load AC-15 / DC-13

Max. duration of use [Years]	20
Proof-Test-Intervall [Years]	5
PFD <sub>AVG</sub>	1.13E-04
SIL	3

#### Safety characteristics for alternate 1oo1 structure for process industry - Low Demand

Conditions: Maximum load AC-15 / DC-13

Device type	A
HFT	0
SIL	3
SFF [%]	91.52
λ <sub>SD</sub> [FIT]	0
λ <sub>SU</sub> [FIT]	92.56
λ <sub>DD</sub> [FIT]	0
λ <sub>DU</sub> [FIT]	8.57
PFD <sub>avg</sub> (e.g. for T = 1 year)	3.75E-05

### Proof-Test

#### In order to check the proper function of the device, the following steps have to be carried out

- Demand the safety function by opening the safety circuit. Check that the relay contact (13-14; 23-24; 33-34; 43-44; 53-54; 63-64; 73-74) opened by activation of the safety function.
- Close the safety circuit and start the device again. Check that the safety contacts (13-14; 23-24; 33-34; 43-44; 53-54; 63-64; 73-74) closed again.

If the device doesn't switch on again, the proof-test failed.

#### ATTENTION:

If the proof-test fails, the device must be replaced. Otherwise there is a risk of loss of functional safety.



CE  
Declaration

### **Konformitätserklärung** EC Declaration of Conformity Déclaration de conformité

**Hersteller:** H. ZANDER GmbH & Co. KG  
**Producer:** Am Gut Wolf 15 • 52070 Aachen • Deutschland  
**Fabricant:**

**Produktgruppe:** Sicherheits-Not-Halt-Schaltgeräte  
**Product Group:** Safety emergency stop switching devices  
**Groupe de produits:** Relais de sécurité d'arrêt d'urgence

Produkt Name	Zertifikats-Nr.
Product Name	No of Certificate
Nom du produit	N° du certificat
SR7C.....	01/205/5113.02/19
SR7D.....	01/205/5113.02/19

#### Die Produkte stimmen mit den Vorschriften folgender Europäischer Richtlinien überein:

The products conform with the essential protection requirements of the following European directives:  
Les produits sont conformes aux dispositions des directives européennes suivantes:

<b>2006/42/EG</b> : Maschinenrichtlinie	<b>2011/65/EU:</b> RoHS Richtlinie
2006/42/EG : Machinery directive	2011/65/EU: RoHS directive
2006/42/EG : Directive <<Machines>>	2011/65/EU: Directive RoHS

**2014/30/EU** : EMV Richtlinie  
2014/30/EU : EMC directive  
2014/30/EU : Directive <<CEM>>

#### Die Übereinstimmung der bezeichneten Produkte mit den Vorschriften der o.a. Richtlinie wird, falls anwendbar, nachgewiesen durch die vollständige Einhaltung folgender Normen:

If applicable, the conformity of the designated products is proved by full compliance with the following standards:  
Le strict respect des norms suivantes confirme, s'il y a lieu, que les produits désignés sont conformes aux dispositions de la directive susmentionnée:

#### Gemäß Zertifikat der benannten Stelle:

According to the certificate of the below mentioned organisation:  
Selon de organisme notifié:

<b>EN ISO 13849-1:2015</b>	<b>EN ISO 13849-2:2012</b>	<b>EN 50178:1997</b> (in extracts)
<b>EN 62061:2005+AC:2010+A1:2013+A2:2015</b>		<b>EN 60204-1:2018</b> (in extracts)
<b>IEC 61508 Parts 1-7:2010</b>	<b>EN 61511-1:2017</b>	
<b>EN 746-2:2010</b> (in extracts, SR7D)	<b>EN 50156-1:2015</b> (in extracts, SR7D)	


Benannte Stelle / Notified Body / Organisme notifié:  
NB 0035  
TÜV Rheinland Industrie Service GmbH, 51105 Köln  
Notified Body for Machinery

Dokumentationsbeauftragte/-r: Christiane Nittschalk  
Documentation manager  
Autorisé à constituer le dossier technique

Aachen, den 26.06.2019



Dr.-Ing. Marco Zander  
Geschäftsleitung  
General Manager  
Direction



Dipl.-Ing. Alfons Austerhoff  
Leiter CE-Konformitätsbewertung  
Manager for EC declaration of conformity  
Responsable évaluation de conformité CE

F7-3-07/03