



## ▶ PSSu E PD(-T)

**PILZ**  
THE SPIRIT OF SAFETY

Operating Manual-21304-EN-06  
- Decentralised system PSSuniversal I/O



This document is the original document.

Where unavoidable, for reasons of readability, the masculine form has been selected when formulating this document. We do assure you that all persons are regarded without discrimination and on an equal basis.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital

<b>1</b>	<b>Introduction</b> .....	<b>5</b>
1.1	Validity of documentation .....	5
1.1.1	Retaining the documentation .....	5
1.2	Definition of symbols .....	5
<b>2</b>	<b>Overview</b> .....	<b>7</b>
2.1	Module structure .....	7
2.2	Module features .....	7
2.3	Front view .....	8
<b>3</b>	<b>Safety</b> .....	<b>10</b>
3.1	Intended use .....	10
3.2	Safety regulations .....	11
3.2.1	Use of qualified personnel .....	11
3.2.2	Warranty and liability .....	11
3.2.3	Disposal .....	11
<b>4</b>	<b>Function description</b> .....	<b>12</b>
4.1	Block diagram .....	12
4.2	Module features .....	12
4.2.1	Functions .....	12
4.3	Configuration .....	12
4.3.1	Addresses in the process image .....	12
<b>5</b>	<b>Installation</b> .....	<b>13</b>
5.1	General installation guidelines .....	13
5.1.1	Dimensions .....	13
5.2	Installing the base module .....	14
5.3	Inserting and removing an electronic module .....	15
5.3.1	Inserting an electronic module .....	16
5.3.2	Removing an electronic module .....	17
5.3.3	Changing an electronic module during operation .....	17
<b>6</b>	<b>Wiring</b> .....	<b>18</b>
6.1	General wiring guidelines .....	18
6.1.1	Mechanical connection of the base modules .....	18
6.2	Terminal configuration .....	20
<b>7</b>	<b>Operation</b> .....	<b>22</b>
7.1	Messages .....	22
7.2	Display elements .....	22
7.2.1	Display elements for module diagnostics .....	22
<b>8</b>	<b>Technical details</b> .....	<b>23</b>
<b>9</b>	<b>Supplementary data</b> .....	<b>25</b>
9.1	Permitted operating height .....	25

<b>10</b>	<b>Order reference .....</b>	<b>26</b>
10.1	Product.....	26
10.2	Accessories.....	26

# 1 Introduction

## 1.1 Validity of documentation

This documentation is valid for the products PSSu E PD and PSSu E PD-T. It is valid until new documentation is published.

The module PSSu E PD-T is suitable for use where there are increased environmental requirements (see [Technical details](#) [📖 23]).

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

### 1.1.1 Retaining the documentation

This documentation is intended for instruction and should be retained for future reference.

## 1.2 Definition of symbols

Information that is particularly important is identified as follows:



### **DANGER!**

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



### **WARNING!**

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



### **CAUTION!**

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



### **NOTICE**

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



**INFORMATION**

This gives advice on applications and provides information on special features.

## 2 Overview

### 2.1 Module structure

A module consists of

- ▶ Electronic module and
- ▶ Base module with
  - Screw terminals or
  - Cage clamp terminals

The base modules are the carrier units for the electronic modules and are used to connect the field wiring. The electronic modules are inserted on to the base modules and determine the module's function.


Details of the base modules that can be used are available in the chapter entitled “Intended Use”.

### 2.2 Module features

The product has the following features:

- ▶ The module routes the periphery supply from the module bus to the base module terminals.
- ▶ LED for:
  - Periphery supply
- ▶ Application range depends on the base module
- ▶ T-type:
  - PSSu E PD-T: for increased environmental requirements

## 2.3 Front view

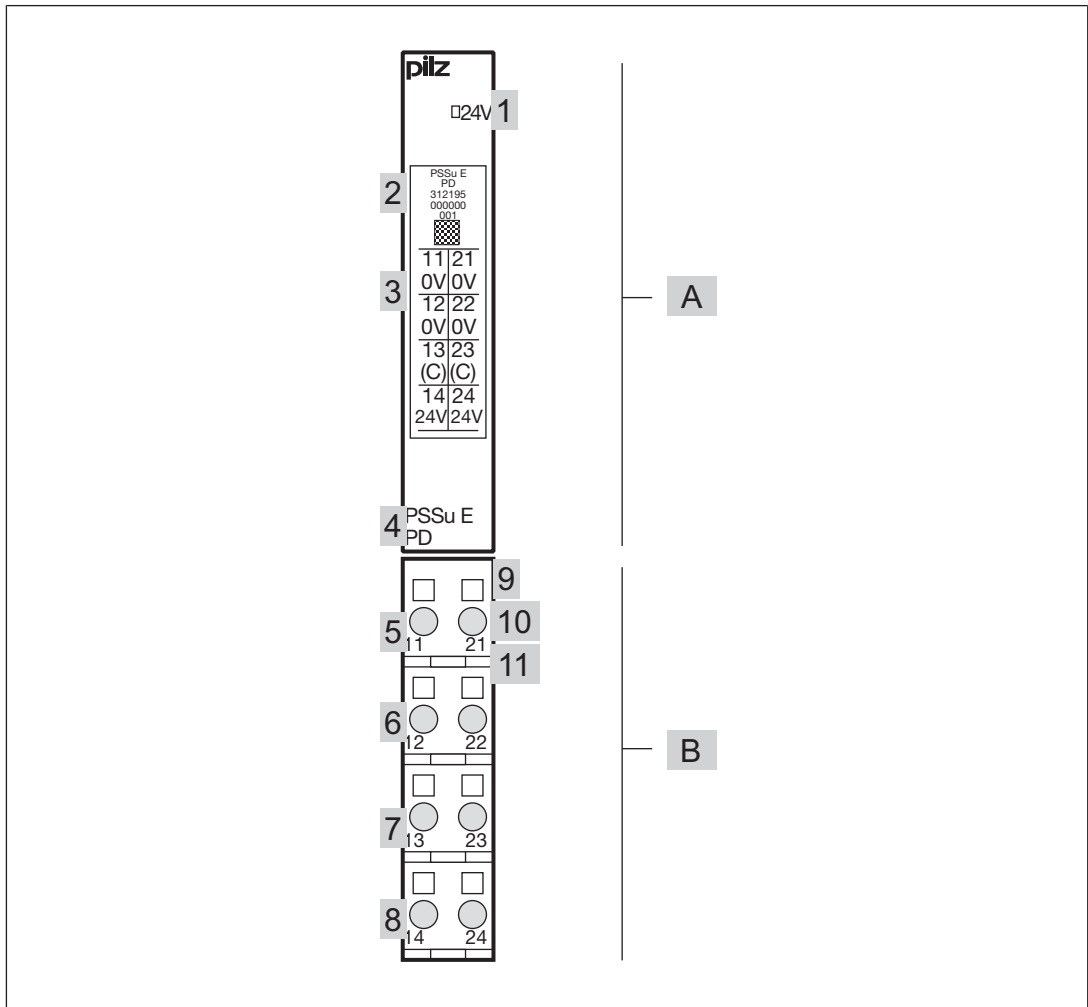

### Key:

- ▶ A: Electronic module
- ▶ B: Base module
- ▶ 1: LED for module diagnostics
- ▶ 2: Labelling strip with:
  - Name of electronic module
  - Order number
  - Serial number
  - Hardware version number
  - 2D code
- ▶ 3: Labelling strip for the terminal configuration on the base module
- ▶ 4: Name of electronic module
- ▶ 5: Connection level 1
- ▶ 6: Connection level 2
- ▶ 7: Connection level 3
- ▶ 8: Connection level 4





- ▶ 9: Square mounting holes (connection levels 1, 2, 3 and 4)
  - With screw to loosen/tighten the screw terminal on base modules with screw terminals
  - With mechanism to operate the cage clamp on base modules with cage clamp terminals
- ▶ 10: Round connection holes (connection levels 1, 2, 3 and 4) for connecting the signal lines
- ▶ 11: Mounting slot for colour marker to label the connection level (connection levels 1, 2, 3 and 4)

## 3 Safety

### 3.1 Intended use

The module may be used for additional connections to the periphery supply. The periphery supply can be drawn from the connections, but may not be fed through that route.

The module PSSu E PD-T is suitable for use where there are increased environmental requirements (see [Technical details](#)  23]).

With reference to the standard IEC 61131-2 the values stated in the technical details for ambient temperature are reduced at heights >2000 m operating height above sea level (see [Supplementary data](#)  25]).

Intended use includes making the electrical installation EMC-compliant. Please refer to the guidelines stated in the "PSSuniversal Installation Manual". The module is designed for use in an industrial environment. It is not suitable for use in a domestic environment, as this can lead to interference.

The following is deemed improper use in particular:

- ▶ Any component, technical or electrical modification to the module
- ▶ Use of the module outside the areas described in this manual
- ▶ Any use of the module that is not in accordance with the technical details.



#### INFORMATION

The module is supported by

- ▶ PSSuniversal Configurator and PSSuniversal Assistant from Version 1.4.0
- ▶ PAS4000 from Version 1.0.0
  - We recommend that you always use the latest version (download from [www.pilz.com](http://www.pilz.com)).

The PSSu E PD module may be used in conjunction with the following base modules:

- ▶ PSSu BP 1/8 S
- ▶ PSSu BP 1/8 C
- ▶ PSSu BP-C 1/8 S
- ▶ PSSu BP-C 1/8 C
- ▶ PSSu BP 1/12 S
- ▶ PSSu BP 1/12 C
- ▶ PSSu BP-C1 1/12 S
- ▶ PSSu BP-C1 1/12 C

The module PSSu E PD-T may be used in conjunction with the following base modules:

- ▶ PSSu BP 1/8 S-T
- ▶ PSSu BP 1/8 C-T
- ▶ PSSu BP-C 1/8 S-T
- ▶ PSSu BP-C 1/8 C-T
- ▶ PSSu BP 1/12 S-T
- ▶ PSSu BP 1/12 C-T
- ▶ PSSu BP-C1 1/12 S-T
- ▶ PSSu BP-C1 1/12 C-T

## **3.2 Safety regulations**

### **3.2.1 Use of qualified personnel**

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by persons who are competent to do so.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. To be able to inspect, assess and operate devices, systems and machines, the person has to be informed of the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention,
- ▶ Have read and understood the information provided in the section entitled Safety
- ▶ Have a good knowledge of the generic and specialist standards applicable to the specific application.

### **3.2.2 Warranty and liability**

All claims to warranty and liability will be rendered invalid if


- ▶ The product was used contrary to the purpose for which it is intended,
- ▶ Damage can be attributed to not having followed the guidelines in the manual,
- ▶ Operating personnel are not suitably qualified,
- ▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

### **3.2.3 Disposal**

- ▶ In safety-related applications, please comply with the mission time  $T_M$  in the safety-related characteristic data.
- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

## 4 Function description

### 4.1 Block diagram

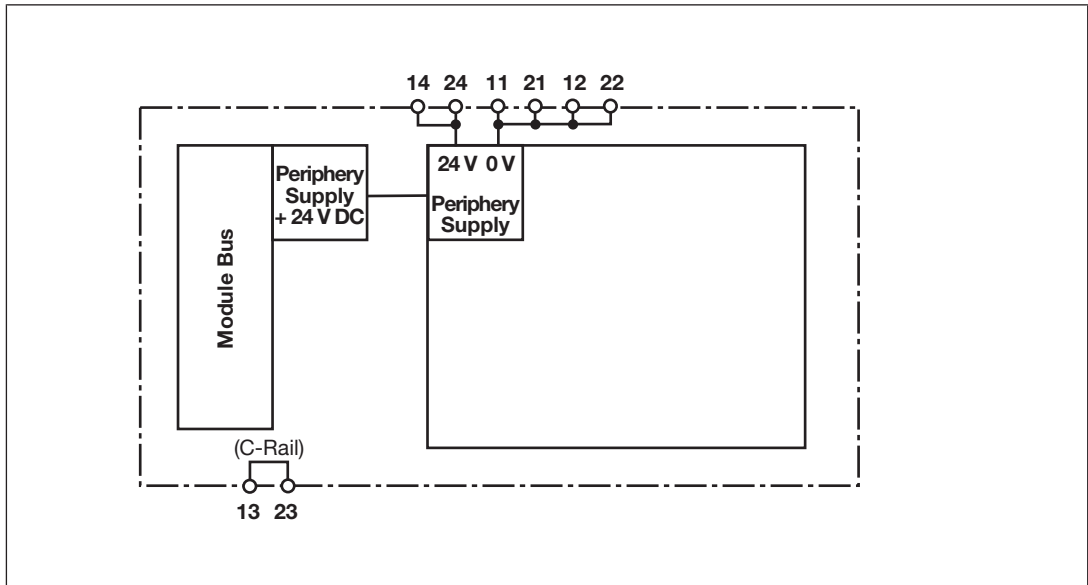

### 4.2 Module features

#### 4.2.1 Functions

- ▶ The module routes the periphery supply from the module bus to the base module terminals.
- ▶ The module does not switch the periphery supply.
- ▶ The periphery supply has no current limitation.

### 4.3 Configuration

The module does not have to be configured.

#### 4.3.1 Addresses in the process image

The module does not occupy any addresses in the process image.

## 5 Installation

### 5.1 General installation guidelines

Please also refer to the PSSuniversal Installation Manual.




#### NOTICE

Damage due to electrostatic discharge!


Electrostatic discharge can damage components. Ensure against discharge before touching the product, e.g. by touching an earthed, conductive surface or by wearing an earthed armband.

#### 5.1.1 Dimensions

Base modules with four connection levels:

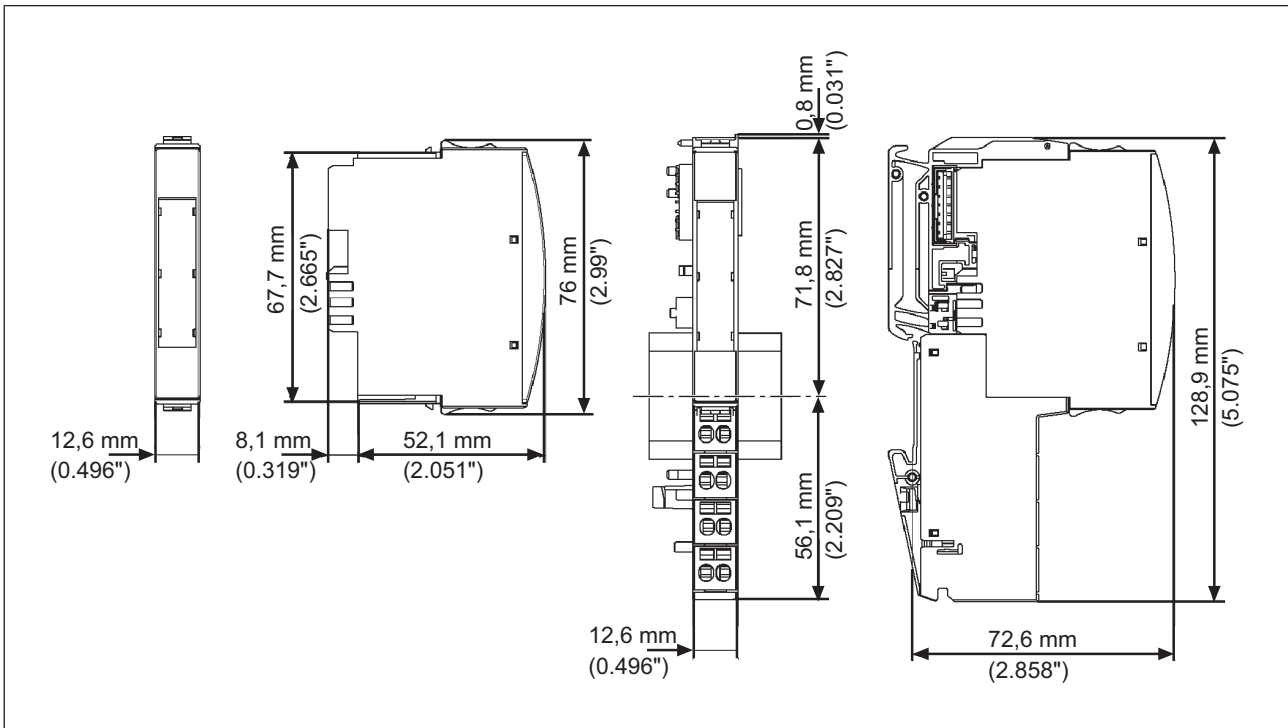

Base modules with six connection levels:

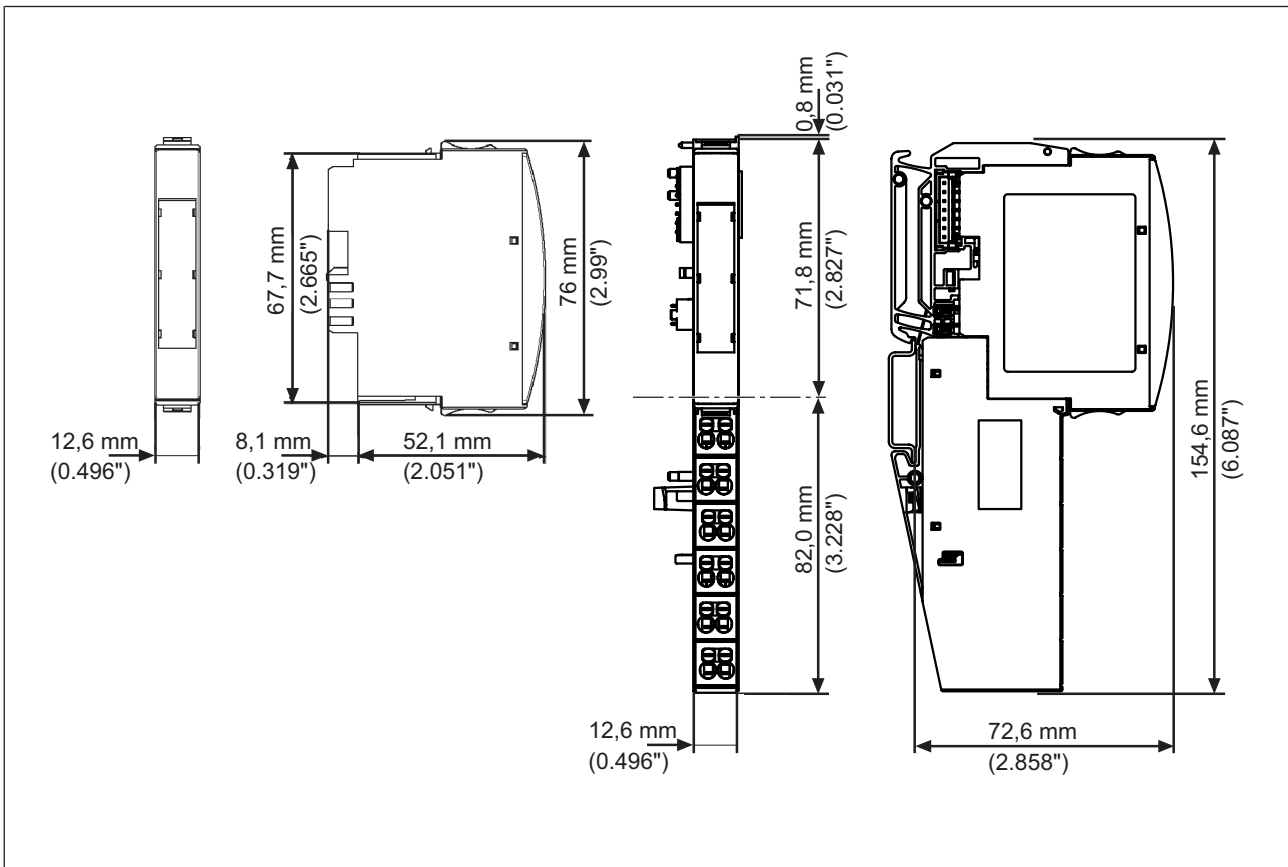

## 5.2 Installing the base module

Prerequisite:

- ▶ The head module must be installed.
- ▶ If the head module does not have an integrated power supply, a supply voltage module must be installed to the right of the head module.


Please note:

- ▶ For mechanical reasons it is not possible to mix base modules with screw terminals and base modules with cage clamp terminals.
- ▶ All contacts should be protected from contamination.
- ▶ The mechanics of the base modules are designed for 50 plug in/out cycles.

Procedure:

- ▶ We recommend that you wire up the base modules before inserting the electronic modules.
- ▶ Slot the groove on the base module on to the mounting rail from below [1].
- ▶ Push the base module back [2] until you hear it lock into position.
- ▶ On the mounting rail, slide the base module to the left until you hear the two lateral mounting hooks on the adjacent module lock into position [3].

Schematic representation:

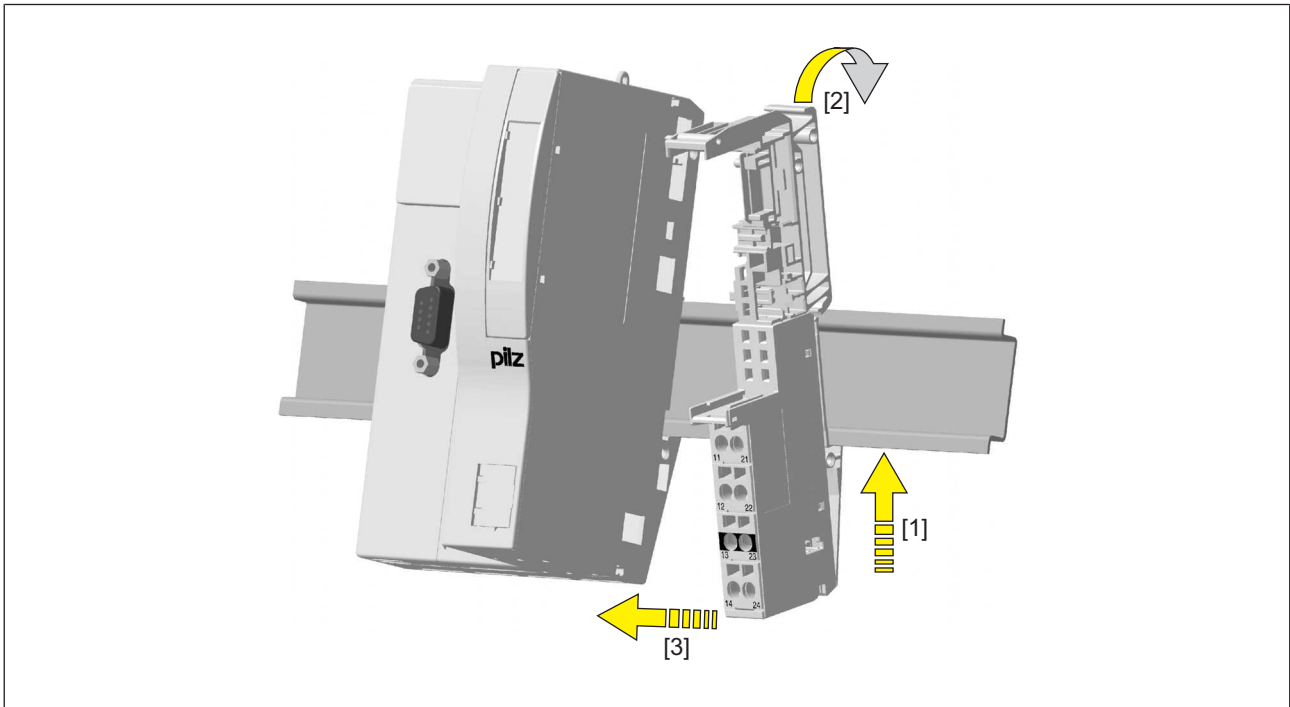

### 5.3 Inserting and removing an electronic module

Please note:


- ▶ Only insert on to base modules that are already installed.
- ▶ Preferably these base modules should be ready wired.
- ▶ Electronic modules with outputs may only be inserted and removed when the load is switched off. Unforeseeable error reactions may be triggered if modules are inserted and removed under load.
- ▶ When an electronic module is plugged into a base module for the first time, one part of the coding element remains on the electronic module, while its counterpart is fixed on to the base module. This is how the base module is coded.
- ▶ The mechanics of the electronic modules are designed for 50 plug in/out cycles.

### 5.3.1 Inserting an electronic module

Procedure:

- ▶ The electronic module must audibly lock into position [1].
- ▶ Mark the electronic module using the labelling strips [2].

Schematic representation:

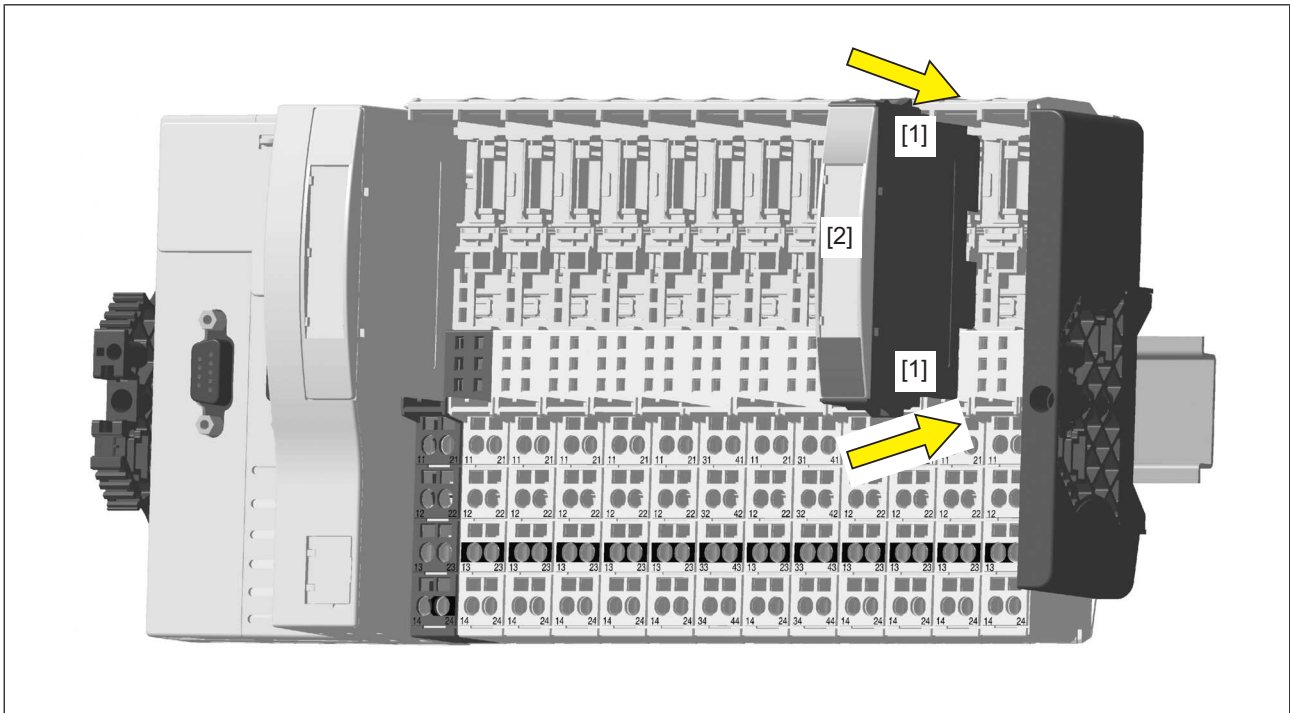




### 5.3.2 Removing an electronic module

Procedure:

- ▶ Press the locking mechanisms [1] together simultaneously.
- ▶ Pull out the electronic module [2].

Schematic representation:

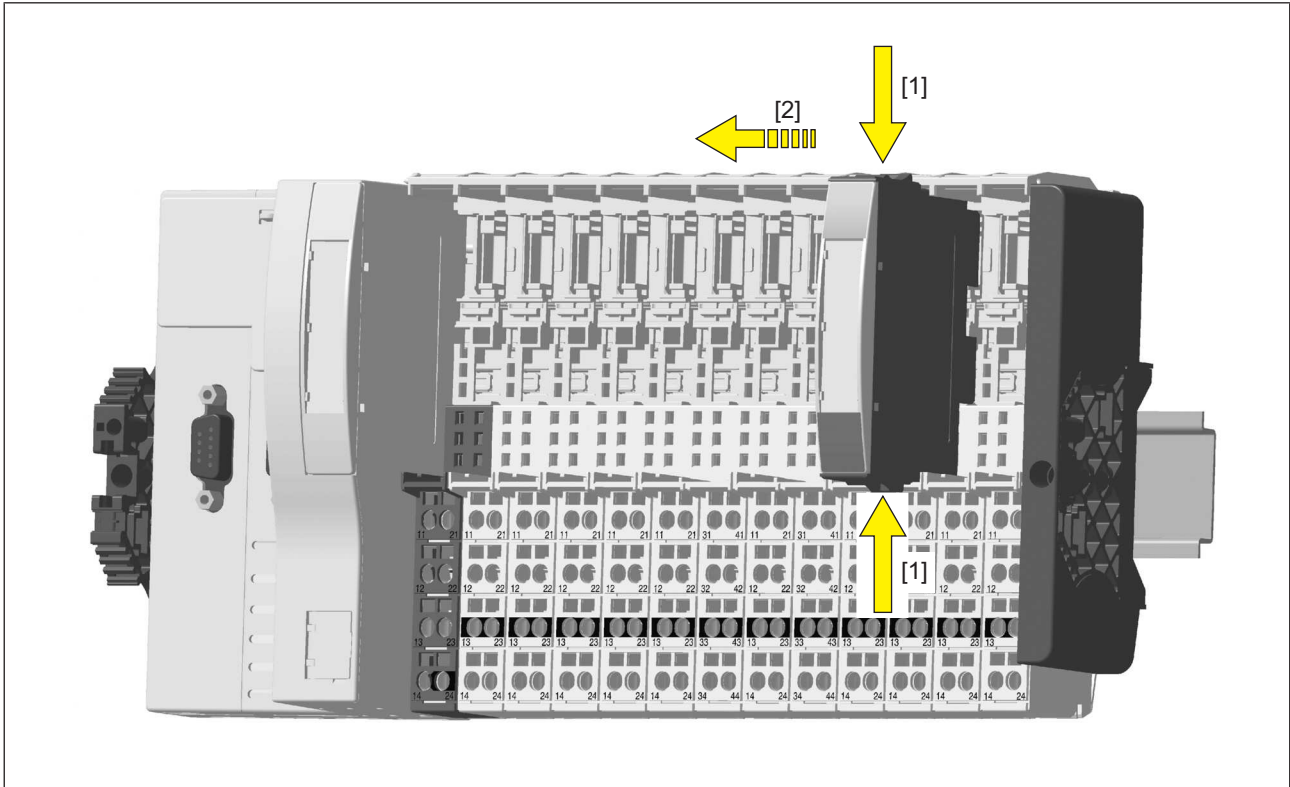

### 5.3.3 Changing an electronic module during operation

It is possible to change an electronic module during operation. The configuration data is retained when a module is changed.

Effects:

- ▶ System environment A:
  - In the event of a potential FS communication error, the FS section of the PSSu system and all relevant I/O-Groups (SafetyBUS p) switch to a STOP condition.
- ▶ System environment B:
  - All FS hardware outputs on the PSSu system switch to a safe condition.
  - The substitute values are used for the modules' FS outputs, with Valid Bits = FALSE.



#### CAUTION!

Sparking can cause interference and errors!

Only change the module when the load is switched off!

## 6 Wiring

### 6.1 General wiring guidelines


Please note:

- ▶ Use copper wiring.
- ▶ The terminal configuration as stated on the front plate applies for base modules with C-rail. The terminal configuration as stated in the technical documentation applies for all other base modules.



#### 6.1.1 Mechanical connection of the base modules

Procedure:

- ▶ Use a flat blade screwdriver (DIN 5264-A)!

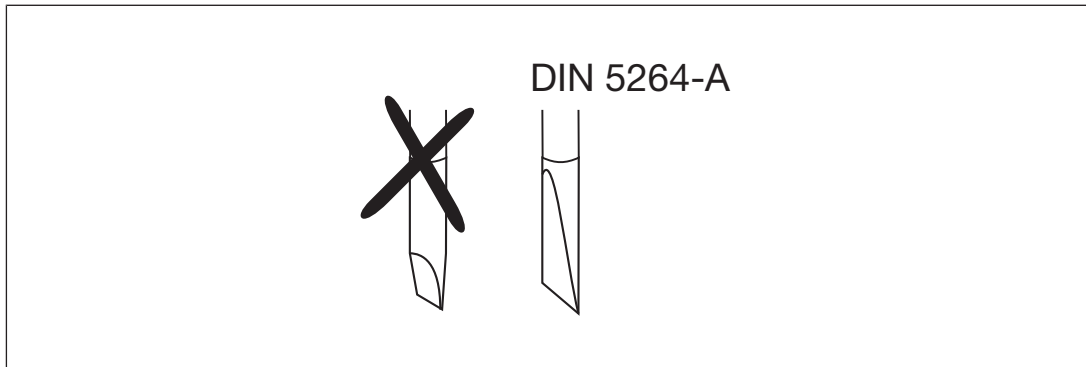

- ▶ Strip the wire back 8 mm.
- ▶ If necessary, label the connection level with a colour marker [3].
- ▶ Base module with screw terminals:
  - Use a screwdriver to loosen the screw on the screw terminal [1]
  - Insert the stripped cable into the round fixing hole [2], as far as it will go.
  - Tighten up the screw on the screw terminal.
  - Check that the cable is firmly seated.
- ▶ Base module with cage clamp terminals:
  - Insert the screwdriver [4] into the square hole [1].
  - Insert the stripped cable into the round fixing hole [2], as far as it will go [5].
  - Pull out the screwdriver [6].
  - Check that the cable is firmly seated.

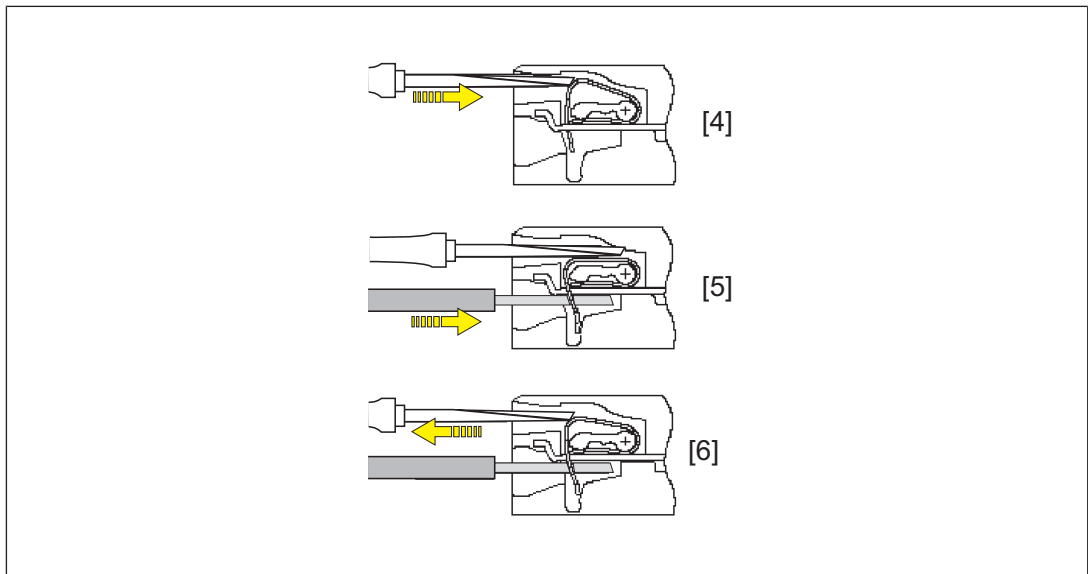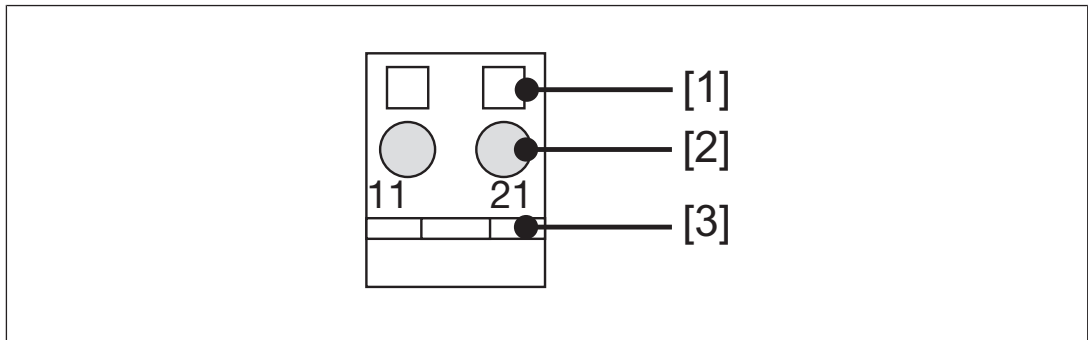


Please note:

- ▶ The minimum cable cross section for field connection terminals on the base modules is 0.14 mm<sup>2</sup> (AWG26).
- ▶ The maximum cable cross section for field connection terminals is:
  - Digital inputs: 1.5 mm<sup>2</sup> (AWG16)
  - Digital outputs: 2.0 mm<sup>2</sup> (AWG14)
  - Inputs/outputs on the counter modules: 1.5 mm<sup>2</sup> (AWG16)
  - Analogue inputs/outputs: 1.5 mm<sup>2</sup> (AWG16)
  - Communication cables: 1.5 mm<sup>2</sup> (AWG16)
  - Test pulse outputs: 1.5 mm<sup>2</sup> (AWG16)
  - Power supply: 2.5 mm<sup>2</sup> (AWG12)
  - Functional earth: 2.5 mm<sup>2</sup> (AWG12)

- ▶ On base modules with screw terminals:
  - If you use a multi-strand cable to connect the I/Os, it is recommended that you use ferrules conforming to Parts 1 and 2 of DIN 46228, 0.14 ... 1.5 mm<sup>2</sup>, Form A or C, although this is not essential. To crimp the ferrules you can use crimp pliers (crimp form A or C) conforming to EN 60947-1, such as the PZ 1.5 or PZ 6.5 from Weidmüller, for example.
  - Maximum torque setting: 0.8 Nm
- ▶ Use copper wiring.

## 6.2 Terminal configuration

Base module	Terminal configuration	
Screw terminals: PSSu BP 1/8 S PSSu BP 1/8 S-T  Cage clamp terminals: PSSu BP 1/8 C PSSu BP 1/8 C-T	Without C-rail:  11 -21: 0 V periphery supply (11-21 linked internally)  12 -22: 0 V periphery supply (12-22 linked within the base module)  13 -23: +24 V periphery supply (13-23 linked within the base module)  14 -24: +24 V periphery supply (14-24 linked internally)	
Screw terminals: PSSu BP-C 1/8 S PSSu BP-C 1/8 S-T  Cage clamp terminals: PSSu BP-C 1/8 C PSSu BP-C 1/8 C-T	With C-rail:  11 -21: 0 V periphery supply (11-21 linked internally)  12 -22: 0 V periphery supply (12-22 linked within the base module)  13 -23: C-rail supply (13-23 linked within the base module)  14 -24: +24 V periphery supply (14-24 linked internally)	

Base module	Terminal configuration	
<p>Screw terminals: PSSu BP-C1 1/12S PSSu BP-C1 1/12S-T</p> <p>Cage clamp terminals: PSSu BP-C1 1/12C PSSu BP-C1 1/12C-T</p>	<p>With C-rail:</p> <p>11 -21: 0 V periphery supply (11-21 linked internally)</p> <p>12 -22: 0 V periphery supply (12-22 linked within the base module)</p> <p>13 -23: C-rail supply (13-23 linked within the base module)</p> <p>14 -24: +24 V periphery supply (14-24 linked internally)</p> <p>15 -25: 0 V periphery supply (15-25 linked within the base module)</p> <p>16 -26: C-rail supply (16-26 linked within the base module)</p>	

## 7 Operation

### 7.1 Messages



The module can detect the following errors:

Module error	Explanation	Remedy
Polarity error	Polarity of the periphery supply	Correct the polarity
Error in the periphery supply	Lower voltage limit exceeded on the periphery supply	Ensure there is a sufficient supply

Further information on PSSu error messages is available in the online help for the PSS WIN-PRO system software.





### 7.2 Display elements

#### Legend

-  LED on
-  LED off

#### 7.2.1 Display elements for module diagnostics

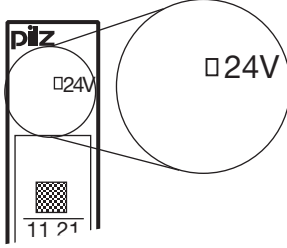A status LED is assigned to the periphery supply ("24 V" LED).

	LED			Key
	Description	Colour	Status	
24 V	---			Periphery supply: No supply voltage or error in the supply voltage
	green			Periphery supply is error-free
	red			Polarity of the periphery supply

## 8 Technical details

<b>General</b>	<b>312195</b>	<b>314195</b>
Certifications	<b>CE, UKCA, cULus Listed</b>	<b>CE, TÜV, UKCA, cULus Listed</b>
Application range	<b>Standard</b>	<b>Standard</b>
Application in system environment A		
from FS firmware version, other head modules	<b>1</b>	<b>1</b>
from ST firmware version, other head modules	<b>1</b>	<b>1</b>
from FS firmware version PSSu H F PN	<b>1</b>	<b>1</b>
from ST firmware version PSSu H S PN	<b>1</b>	<b>1</b>
from ST firmware version PSSu WR S IDN	<b>1</b>	<b>1</b>
Application in system environment B		
from FS firmware version, head modules	<b>1.0.0</b>	<b>1.0.0</b>
from ST firmware version, head modules	<b>1.0.0</b>	<b>1.0.0</b>
<b>Electrical data</b>	<b>312195</b>	<b>314195</b>
Periphery's supply voltage (periphery supply)		
Voltage range	<b>16,8 - 30 V</b>	<b>16,8 - 30 V</b>
Module's current consumption with no load	<b>10 mA</b>	<b>10 mA</b>
Module's power consumption with no load	<b>0,24 W</b>	<b>0,24 W</b>
<b>Environmental data</b>	<b>312195</b>	<b>314195</b>
Climatic suitability	<b>EN 60068-2-1, EN 60068-2-14, EN 60068-2-2, EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-1, EN 60068-2-14, EN 60068-2-2, EN 60068-2-30, EN 60068-2-78</b>
Ambient temperature		
in accordance with the standard	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>	<b>-40 - 70 °C</b>
Storage temperature		
in accordance with the standard	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>	<b>-40 - 70 °C</b>
Climatic suitability		
in accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>	<b>Short-term</b>
Max. operating height above SL	<b>2000 m</b>	<b>5000 m</b>

<b>Environmental data</b>	<b>312195</b>	<b>314195</b>
EMC	EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6	EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6, EN 61000-6-2, EN 61000-6-4
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	10 - 150 Hz
Amplitude	0,35 mm	0,35 mm
Acceleration	1g	1g
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Number of shocks	6	6
Acceleration	15g	15g
Duration	11 ms	11 ms
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Number of shocks	1000	1000
Acceleration	10g	10g
Duration	16 ms	16 ms
Airgap creepage		
in accordance with the standard	EN 60664-1	EN 60664-1
Overvoltage category	II	II
Pollution degree	2	2
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
<b>Mechanical data</b>	<b>312195</b>	<b>314195</b>
Material		
Bottom	PC	PC
Front	PC	PC
Coding	PA	PA
Mounting type	plug-in	plug-in
Dimensions		
Height	76 mm	76 mm
Width	12,6 mm	12,6 mm
Depth	60,2 mm	60,2 mm
Weight	29 g	28 g
Mechanical coding		
Type	A	A
Colour	Light grey	Light grey

Where standards are undated, the 2015-03 latest editions shall apply.



## 9 Supplementary data

### 9.1 Permitted operating height

The values stated in the technical details apply to the use of the device in operating heights up to max. 2000 m above SL. When used at higher levels, restrictions of the ambient temperature (standard IEC 61131-2) must be taken into account.

Operating height above SL [m]	Multiplication factors for the devices' ambient temperature
0 ... 2000	1.0
3000	0.9
4000	0.8
5000	0.7

## 10 Order reference

### 10.1 Product

Product type	Features	Order no.
PSSu E PD	Electronic module, base type	312195
PSSu E PD-T	Electronic module, T-type	314195

### 10.2 Accessories

#### Base modules

Product type	Features	Order no.
PSSu BP 1/8 S	Base module without C-rail with screw terminals	312600
PSSu BP 1/8 S-T	Base module without C-rail with screw terminals, T-type	314600
PSSu BP 1/8 C	Base module without C-rail with cage clamp terminals	312601
PSSu BP 1/8 C-T	Base module without C-rail with cage clamp terminals, T-type	314601
PSSu BP-C 1/8 S	Base module with C-rail and screw terminals	312610
PSSu BP-C 1/8 S-T	Base module with C-rail and screw terminals, T-type	314610
PSSu BP-C 1/8 C	Base module with C-rail and cage clamp terminals	312611
PSSu BP-C 1/8 C-T	Base module with C-rail and cage clamp terminals, T-type	314611
PSSu BP 1/12 S	Base module without C-rail with screw terminals	312618
PSSu BP 1/12 S-T	Base module without C-rail with screw terminals, T-type	314618
PSSu BP 1/12 C	Base module without C-rail with cage clamp terminals	312619
PSSu BP 1/12 C-T	Base module without C-rail with cage clamp terminals, T-type	314619
PSSu BP-C1 1/12 S	Base module with C-rail and screw terminals	312622
PSSu BP-C1 1/12 S-T	Base module with C-rail and screw terminals, T-type	314622
PSSu BP-C1 1/12 C	Base module with C-rail and cage clamp terminals	312623
PSSu BP-C1 1/12 C-T	Base module with C-rail and cage clamp terminals, T-type	314623

# ► Support

Technical support is available from Pilz round the clock.

## Americas

**Brazil**  
+55 11 97569-2804

**Canada**  
+1 888 315 7459

**Mexico**  
+52 55 5572 1300

**USA (toll-free)**  
+1 877-PILZUSA (745-9872)

## Asia

**China**  
+86 21 60880878-216

**Japan**  
+81 45 471-2281

**South Korea**  
+82 31 778 3300

## Australia and Oceania

**Australia**  
+61 3 95600621

**New Zealand**  
+64 9 6345350

## Europe

**Austria**  
+43 1 7986263-0

**Belgium, Luxembourg**  
+32 9 3217570

**France**  
+33 3 88104003

**Germany**  
+49 711 3409-444

**Ireland**  
+353 21 4804983

**Italy, Malta**  
+39 0362 1826711

## Scandinavia

+45 74436332

## Spain

+34 938497433

## Switzerland

+41 62 88979-32

## The Netherlands

+31 347 320477

## Turkey

+90 216 5775552

## United Kingdom

+44 1536 462203

## You can reach our international hotline on:

+49 711 3409-222  
support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.



We are represented internationally. Please refer to our homepage [www.pilz.com](http://www.pilz.com) for further details or contact our headquarters.

Headquarters: Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany  
Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: [info@pilz.com](mailto:info@pilz.com), Internet: [www.pilz.com](http://www.pilz.com)

# PILZ

THE SPIRIT OF SAFETY